 


Book Port Plus Quick Start

Thank you for purchasing Book Port Plus. This Quick Start explains the basic operations. Please see the Book Port Plus User Guide for more information.

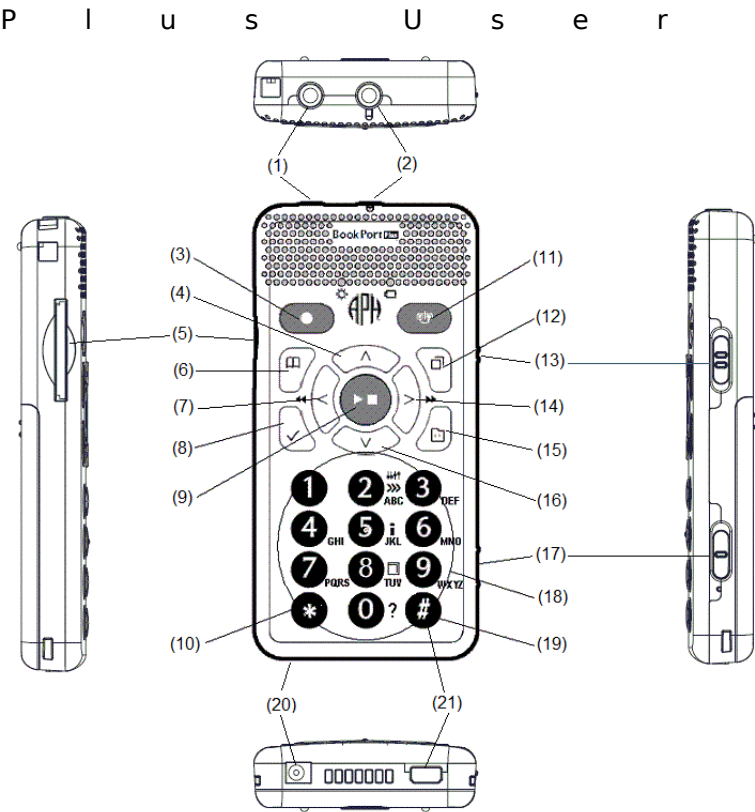

Name of keys

- (1) Mic
- (2) Earphone jack
- (3) Record key
- (4) Up key
- (5) SD Card Slot
- (6) Go to key
- (7) Left key
- (8) Bookmark key
- (9) Play/Stop key
- (10) * key
- (11) Power key
- (12) Menu key
- (13) Right key
- (14) Right key
- (15) Title key
- (16) Down key
- (17) Down key
- (18) Down key
- (19) # key
- (20) AC jack
- (21) USB port

- (5) SD Card Slot
- (6) Go to key
- (7) Left key
- (12) Menu key
- (13) Right key
- (14) Right key
- (19) # key
- (20) AC jack
- (21) USB port

Getting started

Unpack all materials. Set up the player, battery and AC charger.

Insert the battery into the player, and plug in the AC charger.

Procedure


Turn the player over and make sure the two small projections at the top are facing up. Using two hands, grasp the bottom of the player and the two ribs in the middle of the player; slide the cover toward the bottom of the unit and remove it completely.

Place the battery in your hand and orient it so that two projections are on the top side of the battery and the small projection is on the bottom left side of the battery.

A line drawing showing a hand sliding the battery cover off the back of the device. The cover is shown being lifted away from the unit.

A line drawing showing a hand inserting a battery into the back of the device. The battery is oriented with its top side facing up, and its bottom left side is aligned with the device's back.

Gently slide the battery into the player toward the top side of the opening. Do not force it. Note that the battery cannot be inserted toward the left.

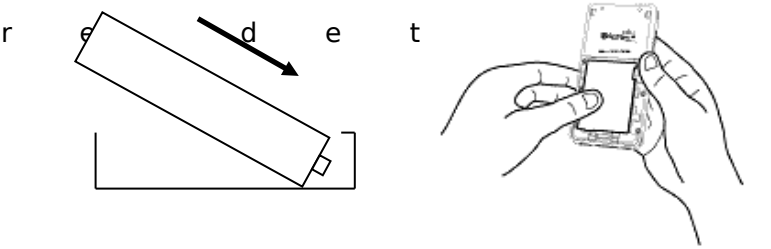

To close the battery cover, place the cover about below the closed battery cover. Slide the cover up until it locks into place.




Turn the player over front side faces up. Plug AC charger into the AC located at the l edge of the player. Charge the battery fully the first time you use the player. about 4 hours. You c B o o k P o r t P charges.



To remove the battery, please refer to the User Manual.

Insert/Remove SD card

Insert the SD card into the card slot located n top of the left ed front of the SD card h smooth surface and the back is ribbed at one edge. Orient the SD card so that the c corner is at t right. Insert the SD card into the card slot, press it firmly and then release.

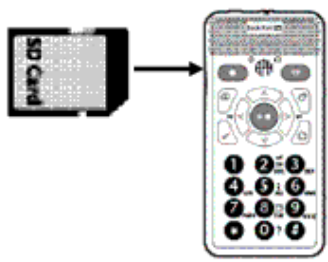

To remove the press in the center card toward the right side of the device until you feel the spring action relea should pop out a little fro the slot. Grasp and pull it to



t h e l e f t t o r e m o v e completely.

Key lock ON/OFF

To lock/unlock player, slide the Key lock switch up/down.

Procedure	
1	Slide the Key lock switch up to lock the player*.
2	Slide the Key lock switch down to unlock the player.

*If the lock is applied, all keys and co it function, including the Power key.

Power ON/OFF

To turn on/off the player, press and hold the Power key.

Procedure	
1	Press and hold the Power key for about 2 seconds* to turn the player on.
2	Press and hold the Power key at least 2 seconds to turn the player off.

*If the Power key is pressed less than 1.5 seconds, it works as a sleep timer.

*When the player is turned on the first time battery is inserted or after the device is turned off, it takes about 30 seconds before the player is ready to use.

Playback

Download and store DAISY books, audio files, and text files on the SD card before playback.

Playback procedure	
1	Insert the SD card and turn the player on.
2	Press Title key until “SD card ” is announced.
3	Select DAISY book, audio file or text file Right key or Left key.

4	Press Play/Stop key to start playback.
5	Press Play/Stop key again to stop playback.
6	Press and hold Power key to turn off.

Recording

Record with the built-in microphone.

Procedure	
1	Confirm that the SD card is inserted in its slot.
2	Press the Record key. Player enters test mode.
3	Press the Record key to start recording.
4	Press the Record key to pause recording.
5	Press the Record key again to resume recording.
6	Press the Play/Stop key to finish recording.

Moving

Move by fast forward/rewind

Procedure	
1	Select a DAISY book.
2	Press Play/Stop key to start playback.
3	Press and hold the Right key to fast forward or press and hold the Left key to rewind. The player announces 5 seconds, 10 seconds, 20 seconds, 1 minute, 5 minutes, minutes and so on. If the key is released before the 10 minute increment, playback starts at the place the key is released. If the key is released after 10 minute increment, FF/REW continues and you must press Play/Stop key to stop.

Move by Table of Contents keys

Procedure	
-----------	--

1	Select a DAISY book.
2	Press Play/Stop key to start playback.
3	Select navigation level by repeatedly pressing the 8 key.
4	Press 9 key to move forward or 7 key to move back.

*Navigation levels of DAISY books are:
“Section (Levels 1 to 6), group, page, phrase, bookmark”
Audio file:
“Album, track, bookmark”
Text file:
“Level (HTML only), bookmark”

Direct jump to page/heading
Example: Moving to page 20.



Procedure	
1	Select a DAISY book.
2	Press Go to key*
3	Input page number with the 2 & 0 keys.
4	Press the Play/stop key or the Down key to jump to page 20. Playback starts automatically.

*To move to a heading, press the Go to key twice.

Connect USB/Flash devices

To playback contents in USB flash or USB devices, use the short USB cable. First, turn the player off. Plug the smaller end of the connector into the player and plug the memory/device into the larger connector of the cable. Turn the player on. Confirmation announces “USB” when the Title key is pressed.

  Connect USB Flash

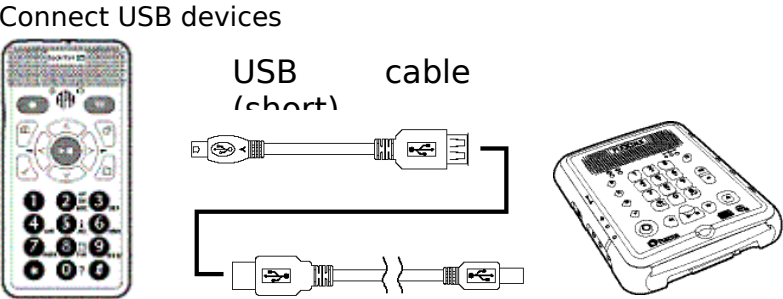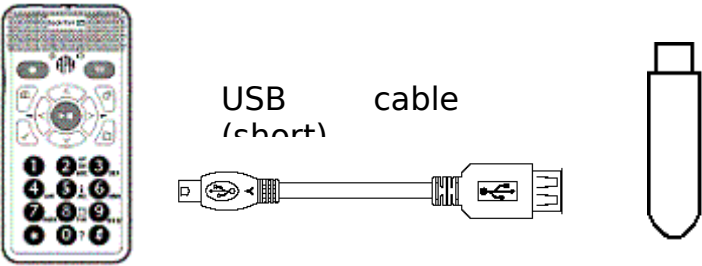

USB cable supplied with USB device

Connect computer

Use the long USB cable to transfer data to and from a computer. Turn the player off and insert the SD card. Connect the small end of the USB cable to the player, and the larger cable end to the computer. Turn the player on. Use the usual computer commands to transfer data to and from the computer.

